PURE

Move 2500

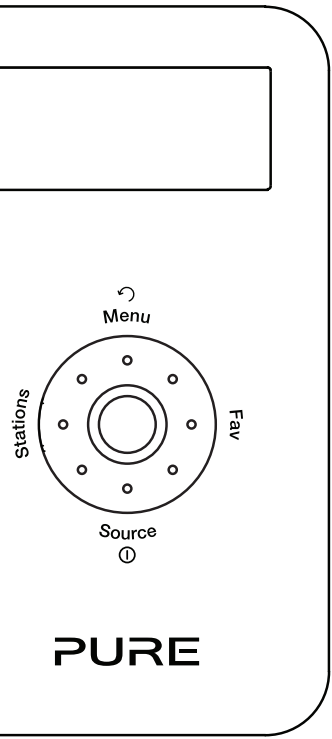

Move 2500

Thank you for choosing Move 2500. This manual will get you up and running in no time and explains how to make the most of Move 2500's great features. If you need additional help with topics not covered in this manual, please visit the Pure support pages at www.pure.com.

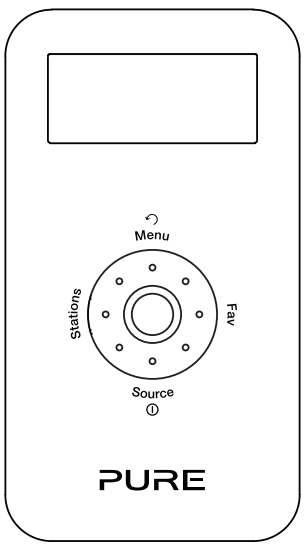

Move 2500 Safety Instructions

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Clean only with dry cloth.
6. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
7. Only use attachments/accessories specified by the manufacturer.
8. Unplug the apparatus during lightning storms or when unused for long periods of time.
9. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, does not operate normally, or has been dropped.
10. To reduce the risk of electric shock, do not remove plastic cover or screws as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
11 Avoid liquids getting into Move. Should not be immersed in water, or used where this may happen, such as a bathroom.

ChargePAK M1 Safety Instructions

1. Read the instructions for ChargePAK use in this document.
2. Only use your ChargePAK with original Pure products.
3. Store ChargePAK in a cool, dry place at normal room temperature. Remove from devices that will be stored unused for extended periods.
4. Do not puncture, modify, drop, throw, or cause other unnecessary shocks to your ChargePAK. May present a risk of fire, explosion, or chemical burn if mistreated.
5. Do not dispose of ChargePAK in a fire or incinerator, or leave in hot places such as a motor car under direct sunlight. Do not store near oven, stove, or other heat source.
6. Do not connect ChargePAK directly to an electrical source, such as a building outlet or automobile power-point. Do not place into a microwave oven, or any other high-pressure container.
7. Do not immerse ChargePAK in water or otherwise expose it to liquids.
8. Do not short circuit ChargePAK.
9. Do not use or charge a ChargePAK that appears to be leaking, discoloured, rusty, deformed; emitting an odour; or is otherwise abnormal.
10. Do not touch a leaking ChargePAK directly; wear protective material to remove and dispose of it properly immediately.
11. Do not store where children may have access.
12. Dispose of ChargePAK as per normal rechargeable batteries according to the local laws and regulations of your region. Some batteries may be recycled, and may be accepted for disposal at your local recycling centre.

Contents

4 What's in the box?

5 Quick guide to Move 2500

6 Getting started

6 Insert the ChargePAK
7 Connect headphones
7 Switch on
7 Select language
7 Autotune

8 Reading the display

9 Using the navigation dial

10 Listening to digital radio

10 Listening to FM radio

11 Favourites

12 Settings

12 Time (12/24h)
12 Language
12 Factory reset
12 Version
12 Update

13 FM stereo

13 Autotune

13 Sleep timer

14 Audio settings

14 Display settings

15 Help and specifications

15 Hints and tips
15 Technical specifications

17 Pure Warranty Statement for Australia

What's in the box?

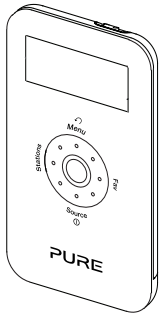

Move 2500

Noise-isolating headphones
(Plus a choice of small, medium or large earbuds)

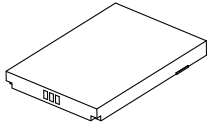

ChargePAK M1

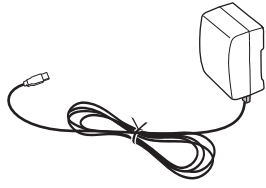

Power adapter
(Attach the appropriate pins for your region)



Quick guide to Move 2500

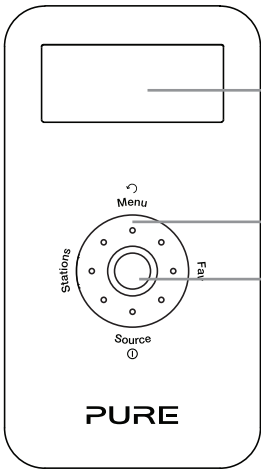

Display

Navigation dial
See page 9 for information.

Select button

Top

Lock switch
Slide to lock the navigation dial and the Select button to prevent accidental use.

Bottom



Micro USB socket
For connecting the mains adapter or a USB cable (for software updates).

3.5mm socket
For headphones.

Getting started

Insert the ChargePAK

1. Press plastic catch on rear and slide the rear cover and lift off as shown.

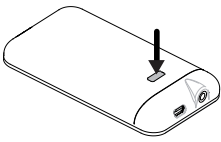

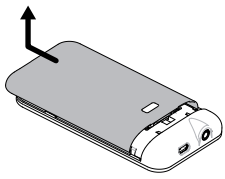

2. Insert ChargePAK M1. It can only be inserted one way, with the ChargePAK logo facing up.

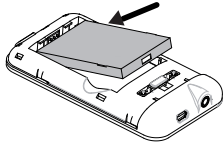

3. Once ChargePAK M1 is securely inserted, place the rear cover back on. Press down slightly near the catch while sliding the cover back on.

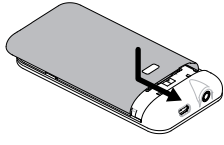

Note: Before using Move for the first time, we recommend that you charge it for at least 3 hours.

Remove ChargePAK M1 if you are storing Move unused for a long period.

Under normal circumstances your ChargePAK M1 will give you years of trouble-free use, but as with all rechargeable batteries its performance will gradually reduce with age. To replace it, visit your local Pure dealer or buy direct from www.pure.com.



Connect headphones

For optimum sound quality and noise isolation, attach the size of earbuds that best fit your ears.

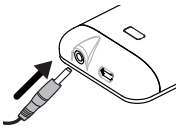

Unravel the earphone cable and plug the headphones into the socket on the bottom of Move.

Warning: Damage to hearing can occur with consistent exposure to high volume when using headphones. Always check the volume level before using Move.

Note: Because the headphone cable doubles as an aerial, using headphones with shorter or asymmetrical cables or using headphones with volume controls may affect reception.

Switch on

Press ⏻ Source to switch Move on.



Select language

Turn the navigation dial and press **Select** to choose from **English**, **French**, **German** or **Italian**.

Autotune

Move will perform an autotune for digital stations and tune to a station when complete. The number of stations found is displayed during an autotune.

Note: An autotune can take up to two minutes.

Reading the display

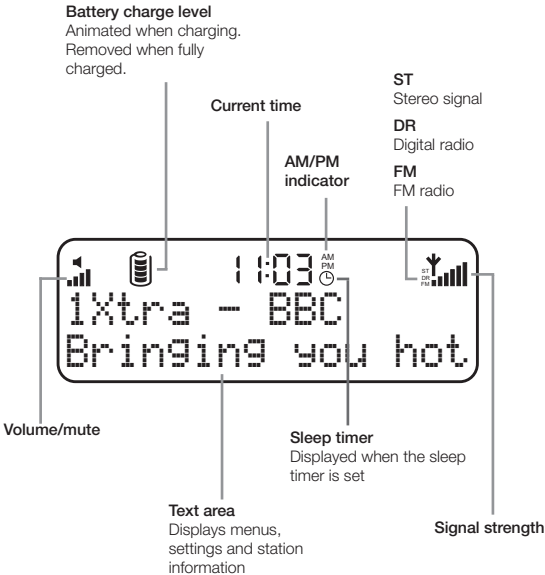

Using the navigation dial

Turn

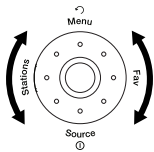



During normal listening
Turn the dial to adjust the volume level.



When in a menu
Turn the dial to scroll through options.

Press

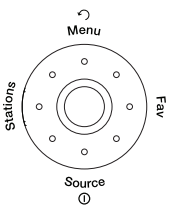

Select (centre button)
Confirm selections.

↶ Menu
Access options and settings. Press again to go back one step.

Fav
Press to display the favourites list. Hold to save a favourite. You can save up to 10 digital and 10 FM stations as favourites.

⏻ Source (also On/Off)
Switch between digital and FM radio. Press to switch on and hold to switch off.

Stations
Displays the station list in digital radio or tuning screen in FM.

Listening to digital radio



Tuning

Press **Stations** to show the station list. Turn the navigation dial to scroll through stations and press **Select** to tune. Press **Menu** or **Stations** to exit.

Listening to FM radio



Tuning

Press **Stations** to show the FM tuning screen then use one of the following methods to find the station you want:



Seek tune

Press left (**Stations**) or right (**Fav**) on the navigation dial to seek to the previous or next station with a strong signal. Press **Select** to exit.

Manual tune

Turn the navigation dial to manually tune to a frequency. Press **Select** to exit.

Favourites

Saving a favourite

You can save up to 10 digital and 10 FM stations as favourites for easy access.

1. Press **Fav** to show the favourites list.
2. Turn the navigation dial to scroll through favourites.

3. Press and hold **Fav** or **Select** to save the current station as a favourite. You can save over existing favourites.



Selecting a favourite

1. Press **Fav** to show the favourites list.
2. Turn the navigation dial to scroll through favourites.
3. Press **Select** to tune.

Settings

Press **Menu**, select **Settings** and choose a setting to adjust:

Time (12h/24h)

Switch between 12 or 24 hour clock.



Language

Select a menu language from **English**, **French**, **German** or **Italian**.



Factory reset

Select **Yes** to delete all personal settings and favourites. Restarts with default settings.

Version

Displays the current software version.



Update

Contact Pure technical support (http://support.pure.com) for more information on how to update Move 2500 to the latest software version.

FM stereo

(FM radio only)
Press **Menu**, then select **FM stereo** and choose between **Stereo** or **Mono** FM reception. Mono may improve weaker reception.

Autotune

(Digital radio only)
Press **Menu**, then select **Autotune** to search for new stations and remove those no longer broadcasting.

Sleep timer

The sleep timer can be set to switch Move off after a period of time.



1. Press **Menu**, then select **Sleep timer**.
2. Turn the navigation dial and press **Select** to set the timer for up to 90 minutes or choose **Sleep off** to cancel.

The sleep timer icon will appear when a sleep timer is set.

Audio settings

To adjust the bass and treble settings:



1. Press **Menu**, then select **Audio**.
2. Select **Bass** or **Treble**.
3. Turn the navigation dial and press **Select** to set the level from -6 (low) to 6 (high).

Display settings

Press **Menu**, select **Display** and select one of the following options:



Backlight

Adjust how long the display backlight stays on. Choose from **Always on**, **Timed off** (after 7 seconds) or **Off**.



Information

(Digital radio only)

Choose the information shown on the display.

Scrolling text

Provided by the broadcaster.

Signal strength

The clear block indicates reliable reception level.

Signal quality

From **0** (low) to **100** (high).

Help and specifications

Hints and tips

The current value for most settings is indicated on the display by an asterisk (*).

Technical specifications

Radio	DAB/DAB+/DMB-R (Band III and L-Band) and FM (RDS).
Headphones	Noise-isolating, 16 Ohm, 10 mm drivers.
Input	Micro USB for power supply and software upgrade.
Output	3.5mm stereo output for headphones.
Mains power	100-240V, 50/60Hz 5V DC 800mA external power adapter.
Battery	ChargePAK M1 1000mAh.
Dimensions	102 mm x 56 mm x 15 mm
Approvals CE	CE marked. Compliant with the EMC and Low Voltage Directives (2004/108/EC and 2006/95/EC) ETSI EN 300 401 compliant. Australian C-Tick N1600 and Electrical Safety.

Warranty information
Imagination Technologies Ltd. warrants to the end user that this product will be free from defects in materials and workmanship in the course of normal use for a period of two years from the date of purchase. This guarantee covers breakdowns due to manufacturing or design faults; it does not apply in cases such as accidental damage, however caused, wear and tear, negligence, adjustment, modification or repair not authorised by us. Should you have a problem with your unit please contact your supplier or contact Pure Support at http://support.pure.com.

Disclaimer
Imagination Technologies Limited makes no representation or warranties with respect to the content of this document and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, Imagination Technologies Limited reserves the right to revise this publication and to make changes in it from time to time without obligation of Imagination Technologies Limited to notify any person or organization of such revisions or changes.

Trademarks
Move 2500, ChargePAK, Pure, the Pure logo, Imagination Technologies, and the Imagination Technologies logo are trademarks or registered trademarks of Imagination Technologies Limited.

Copyright
Copyright © 2012 Imagination Technologies Limited. All rights reserved. No part of this publication may be copied or distributed, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language, in any form or by any means, electronic, mechanical, magnetic, manual or otherwise, or disclosed to third parties without the express written permission of Imagination Technologies Limited. Version 3 April 2012.

Disposal of Waste Electrical & Electronic Equipment
This symbol on the product or on its packaging indicates that this product should not be treated as household waste. Instead it should be handed over to a suitable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local council office, your household waste disposal service or the shop where you purchased the product.

Pure Warranty Statement for Australia

This statement replaces any reference to warranty which may be contained elsewhere within this manual.
What do you need to do now?
Option 1: You can register your purchase on-line at https://www.pure.com/au/register/register.asp
Option 2: Or you can do nothing other than keep your proof of purchase as evidence of your purchase date. This proof of purchase would need to be presented if warranty service was ever required.
If you have any questions about your warranty you can call us toll free: 1800 988 268
What's covered by this warranty?

- Pure agrees to refund, repair or replace, at your election, without charge to you, any part found to be defective during the warranty period.
- If equipment has been used according to its accompanying instruction manual and is used in a domestic situation, a two year warranty period applies (excludes rechargeable ChargePAK where fitted. A one year warranty period applies to all ChargePAKs).

How do you make your claim?

Call 1800 988 268 for instructions on how to return your Pure product for warranty service or go to: http://support.pure.com/au/ and complete the contact us form.

What's NOT covered by this warranty?

Under this express warranty Pure will not be liable for loss or damage of any kind whatsoever, whether direct, indirect, incidental, consequential or otherwise.

- Replacement of parts due to normal wear and tear
- Products with serial number defacement, modification or removal
- Water damage or corrosion caused by dampness
- Any damage or deterioration due to shipments
- Any damage or deterioration due to shipment
- Any product which has been subjected to misuse, abuse or accident

Australian consumers — The benefits to the consumer given by this express warranty are in addition to other rights and remedies of the consumer under a law in relation to the goods or services to which this warranty relates. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Pure is distributed and supported in Australia by PIONEER ELECTRONICS AUSTRALIA PTY LTD, 5 ARCO LANE, HEATHERTON, VICTORIA, 3202

PURE

www.pure.com
connect.pure.com
www.facebook.com/pure

Pure
Imagination Technologies Ltd
Home Park Estate
Kings Langley
Herts, WD4 8LZ
United Kingdom
http://support.pure.com

Pure Australasia Pty Ltd
PO Box 5049
Wonga Park
Victoria 3115
Australia
sales.au@pure.com
http://support.pure.com/au

103HZ